

INSTALLATION OVERVIEW

201-EBT-30B



This installation overview is not a substitute for reading the product manuals

WHAT'S INCLUDED



1 x 201-217-30 - Gauge and mounting bracket



3 x 218-SK - Weld strain sensor installation kit



Scan here to see additional resources on our website including full installation manuals, quick set up guides, and video tutorials!

SENSOR CONFIGURATION




The gauge should be set to detect **3 Spring Sensors**. See *Spring Suspension Gauge manual* for more information on how to set the sensor configuration.

APPLICATIONS

Trailer Axle Group: Tri Axle


Sensor Location:

The strain sensors should be located on the top, center of each axle with sensor "A" being the front axle and sensor "C" the rear axle. See 218-SK manual for more information on how to install the sensors.

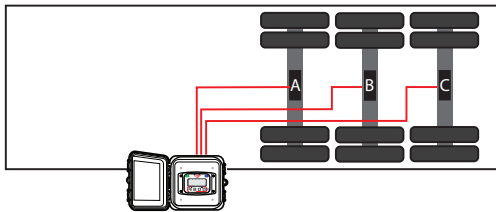

Mode:

Set the gauge to either Average (AVG) or Independent (IDP) mode. AVG mode gives a single weight for the axle group. IDP mode measures three separate weights for each axle on the trailer. See Spring Suspension Gauge manual for information on how to set the mode.

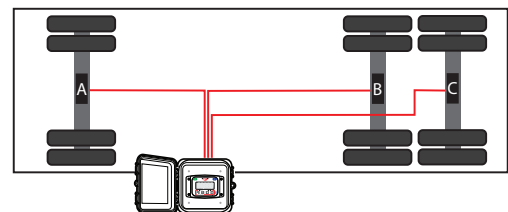

Mode:

Set the gauge to either Front 1 Back 2 (F1b2) or Independent (IDP) mode. F1b2 mode measures the front axle separately from the back axles. IDP mode will measure three separate weights for each axle on the trailer. See Spring Suspension Gauge manual for information on how to set the mode.

CONTACT US!

Right Weigh, Inc.
(888) 818-2058
www.rwls.com
support@rwls.com

Follow Us!

