

INSTALLATION OVERVIEW


201-EBT-20B




This installation overview is not a substitute for reading the product manuals

PP-003-0054 REV A

WHAT'S INCLUDED

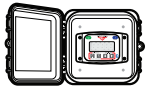

1 x **201-219-20** - Gauge and mounting bracket

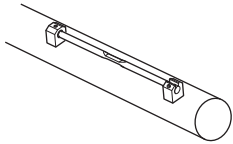


2 x **211-SK** - Strain sensor installation kit (Round axle)

APPLICATION

Trailer Axle Group: Tandem Axle


Sensor Location:

The gauge should be installed on the trailer and the strain sensors should be located on the top, center of each axle with sensor "A" being the forward most axle. See 211-SK manual for more information on how to install the strain sensor.

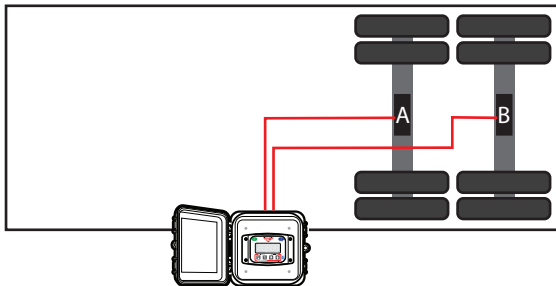

Mode:

The gauge should be set to either average (AVG - gives average weight of each axle) or independent (IDP - gives individual axle weights) mode. See 201-219-20 manual for information on how to set the mode.

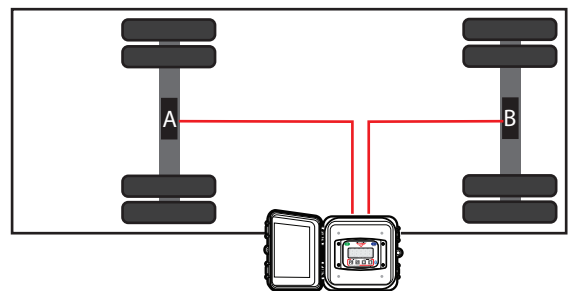

Mode:

The gauge should be set to independent (IDP) mode. See 201-219-20 manual for information on how to set the mode.

CONTACT US!

Right Weigh, Inc.
(888) 818-2058
www.rwls.com
support@rwls.com

Follow Us!

