

INSTALLATION OVERVIEW

201-EBT-11B



This installation overview is not a substitute for reading the product manuals

 


Scan here to see additional resources on our website including full installation manuals, quick set up guides, and video tutorials!

WHAT'S INCLUDED



1 x 201-217-31 - Gauge and mounting bracket



1 x 221-SK - Epoxy strain sensor installation kit



1 x 201-SK - Air line and electrical installation kit

SENSOR CONFIGURATION



The gauge should be set to detect 1 Spring Sensor. See Air/Spring Suspension Gauge manual for more information on how to set the sensor configuration.

APPLICATIONS


Straight Truck: Spring Steer and Air Drive Suspension

Sensor Location:

The strain sensor should be located on the top, center of the steer axle. See 221-SK manual for more information on how to install the sensor. The air sensor should be connected directly to an air bag on the drive axle group. See the 201-SK manual for more information on how to install the air line connection.

Mode:

Set the gauge to Spring Average Air Average (SA AA) mode - separates weight into the front axle group (steer axle) and the back axle group (drive). See Air/Spring Suspension Gauge manual for information on how to set the mode.

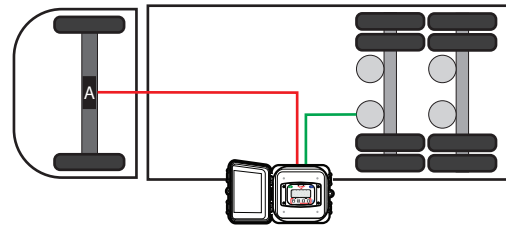

CONTACT US!

Right Weigh, Inc.
(888) 818-2058
www.rwls.com
support@rwls.com

Follow Us!

