

# INSTALLATION OVERVIEW

## 201-EBT-21B



This installation overview is not a substitute for reading the product manuals


### WHAT'S INCLUDED



Scan here to see additional resources on our website including full installation manuals, quick set up guides, and video tutorials!



1 x 201-217-31 - Gauge and mounting bracket

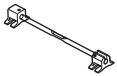

2 x 221-SK - Epoxy strain sensor installation kit



1 x 201-SK - Air line and electrical installation kit

### SENSOR CONFIGURATION



The gauge should be set to detect 2 Spring Sensors. See *Air/Spring Suspension Gauge manual* for more information on how to set the sensor configuration.

### APPLICATIONS

#### Straight Truck: Dual Spring Steer and Air Drive Suspension


##### Sensor Location:

Strain sensors "A" and "B" should be mounted on the top, center of each steer axle with sensor "A" being on the front axle. See the 221-SK installation manual for more information on how to install the strain sensors.

The air sensor should be connected directly to an air bag on the drive axle group. See the 201-SK installation manual for more information on how to install the air line connection.

##### Mode:

Set the gauge to Spring Average Air Average (SA AA) mode to see two separate weights for the steer axle group and the drive axle group. See *Air/Spring Suspension Gauge manual* for information on how to set the mode.

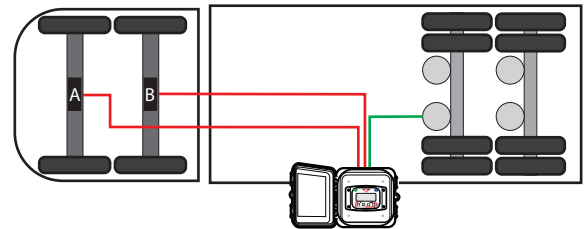

### CONTACT US!

Right Weigh, Inc.  
(888) 818-2058  
www.rwls.com  
support@rwls.com

Follow Us!

