

# INSTALLATION OVERVIEW

## 201-EBT-20B-TT



This installation overview is not a substitute for reading the product manuals




Scan here to see additional resources on our website including full installation manuals, quick set up guides, and video tutorials!

### WHAT'S INCLUDED



1 x 201-217-30 - Gauge and mounting bracket

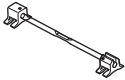

1 x 221-SK - Epoxy strain sensor installation kit



1 x 218-SK - Weld strain sensor installation kit

### SENSOR CONFIGURATION



The gauge should be set to detect 2 Spring Sensors. See *Spring Suspension Gauge manual* for more information on how to set the sensor configuration.

### APPLICATIONS


#### Tractor or Straight Truck with Mack Camelback Suspension

##### Sensor Location:

The gauge can be mounted anywhere on the outside of the vehicle. Strain sensor "A" should be mounted on the top, center of the steer axle using the 221-SK installation kit. Strain sensor "B" should be mounted on the top, center of the trunnion tube that runs between the two drive axles using the 218-SK installation kit. Refer to the 218-SK and 221-SK manuals for more information on how to install each strain sensor.

##### Mode:

Set the gauge to Independent (IDP) mode to see separate weights for the steer axle and the drive axle group. See *Spring Suspension Gauge manual* for information on how to set the mode.

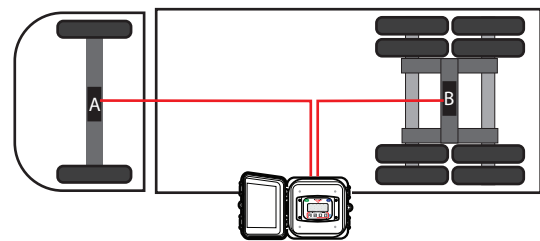

### CONTACT US!

Right Weigh, Inc.  
(888) 818-2058  
www.rwls.com  
support@rwls.com

Follow Us!

